


Step 1:

Cut horizontal slit in building paper, 2" above the pipe and the same width of the Pro-Flash/Greenskin (PF) being installed.

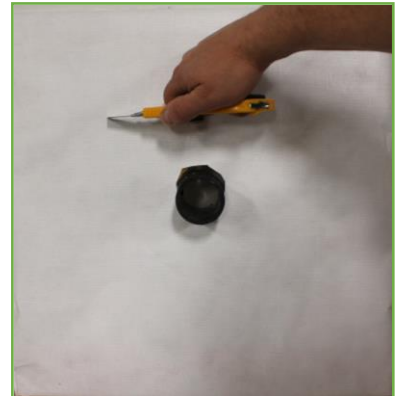

Step 2:

Slide PF over pipe penetration. If necessary, to adjust the Pro-Flash size simply pierce the appropriate tear ring and pull to remove. Slide top of PF into slit in building wrap.



Step 3:

Using recommended manufacturer tape, tape the left and right sides of PF. Tape above the PF along the previously cut slit in the building wrap.

