


**Step 1:**

Cut horizontal slit in building paper, 2" above the electrical box and the same width of the Greenskin (GS) being installed. Install stiffener around electrical box.

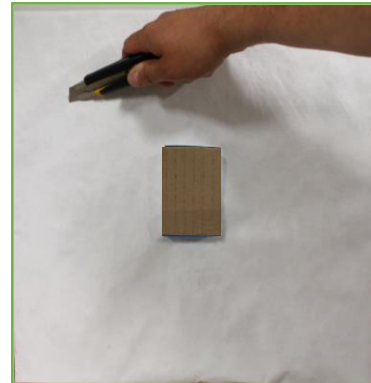

**Step 2:**

Slide Greenskin over electrical box. Place top of Greenskin into slit in building wrap.



**Step 3:**

Using recommended manufacturer tape, tape the left and right sides of GS. Tape above the GS along the previously cut slit in the building wrap.



**Step 4:**

Once exterior is finished, simply trim excess material from GS and remove temporary wall stiffener.

